




# 190x100cm Bed

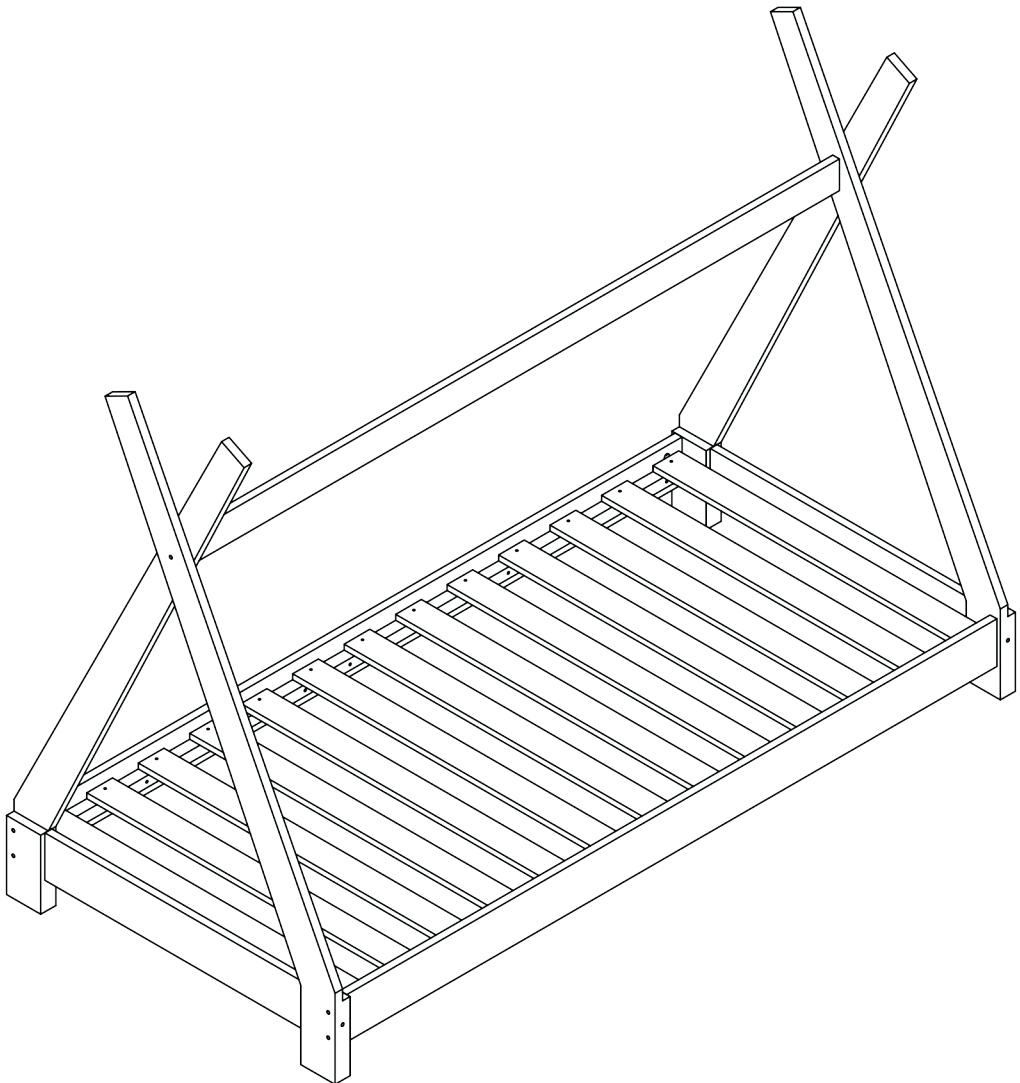

READ THE ASSEMBLY INSTRUCTIONS CAREFULLY. IDENTIFY THE ELEMENTS CONSTITUING YOUR PIECE OF FURNITURE. GROUP AND CHECK THE HARDWARE FITTINGS. GET THE TOOLS NEEDED. CLEAR SPACE TO WORK. PROCEED TO ASSEMBLE


NEVER FORCE THE FITTINGS. TIGHTEN THE SCREW AFTER USING FOR SOME TIME. KEEP YOUR ASSEMBLY INSTRUCTIONS, IT COULD HELP FOR BETTER COMMUNICATION WITH YOUR STORE. IN THE EVENT OF QUERY.

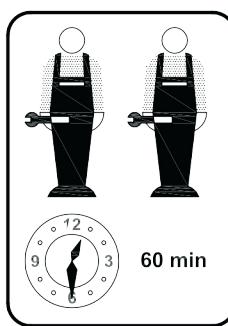

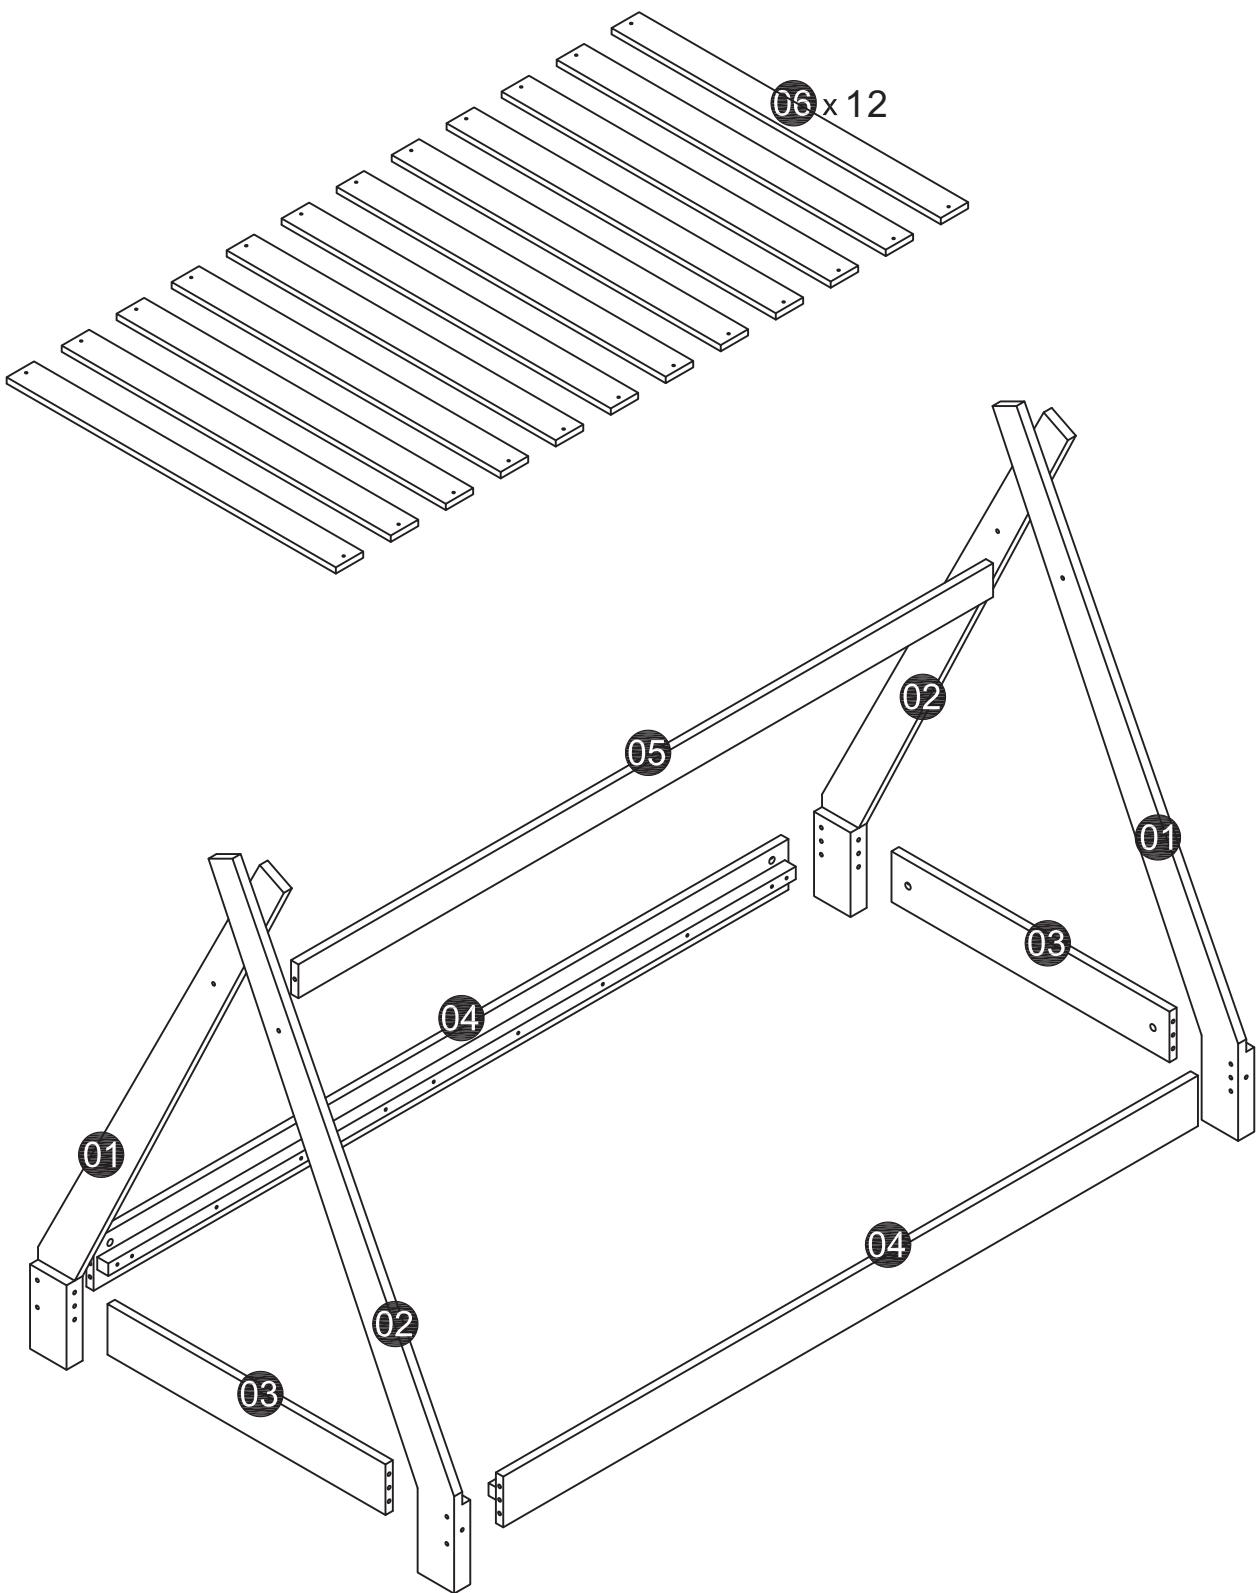


A x4	B x10	C x14	D x12	E x24
M6 x100mm	M6x90mm	Cylindrical Nut	Cylindrical Nut	Spring Lock Nut Ø4 x30mm
F x1	U-shaped Allen Wrench			


**01**

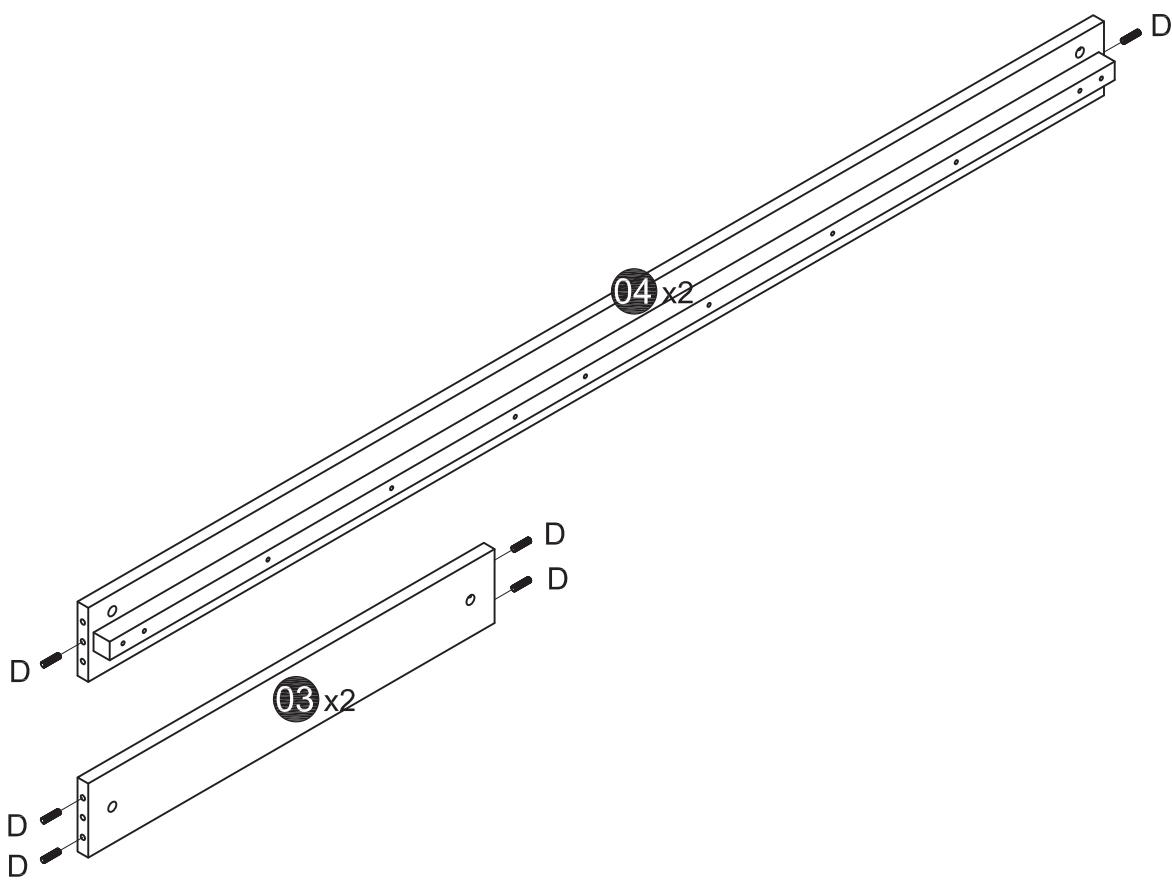

**02**

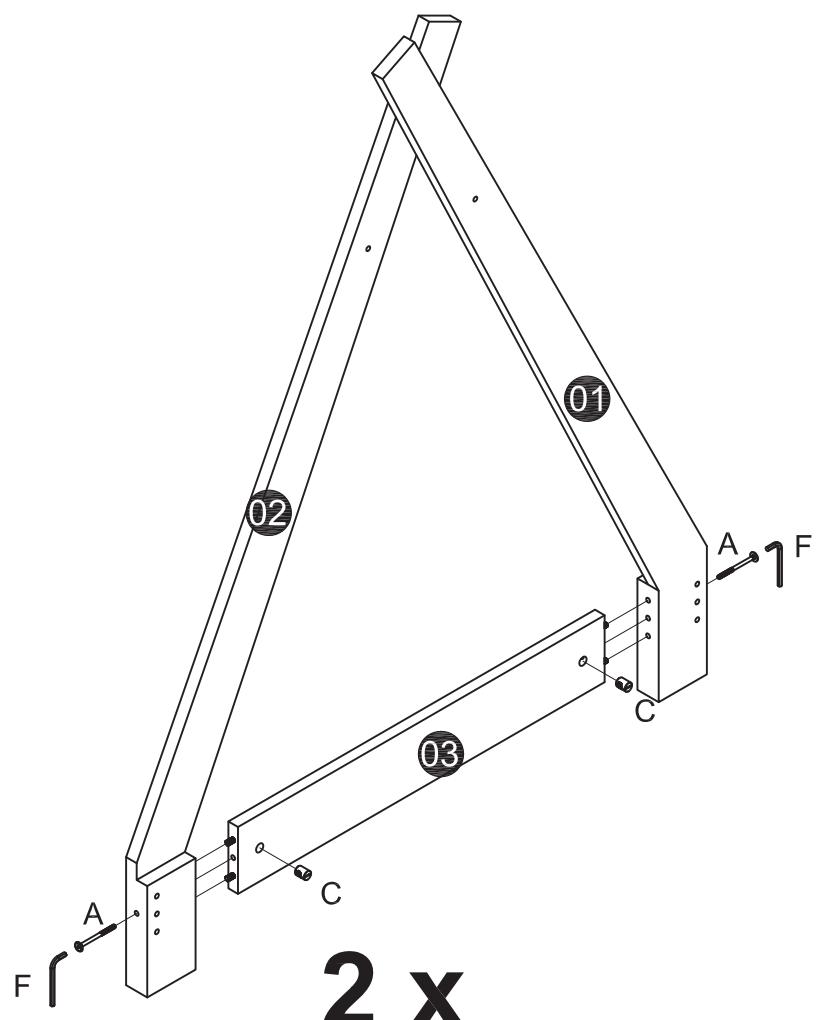

03

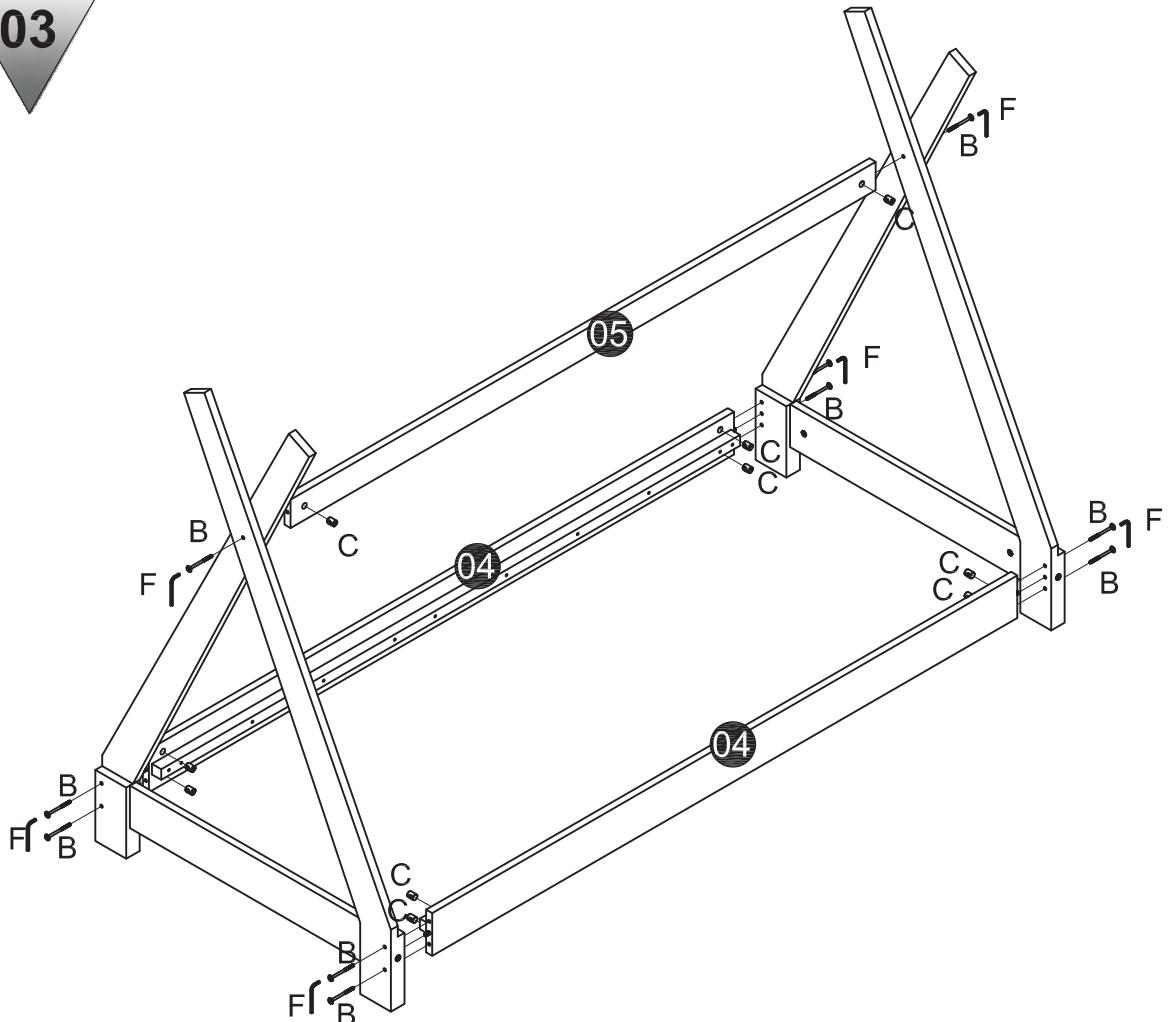

04

